


Replacement of Filter back-flushing key


1. Turn the Main power breaker off in the UV Power Supply Panel



2. Remove the Cable ties from the Filter cover.
And Disconnect grounding cable from the Back-flushing motor.

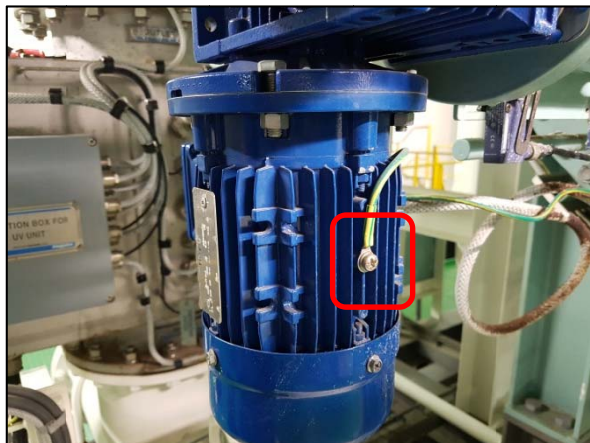



3. Unscrew four(4) of bolts[by Spanner(13)] and Remove Cap flanges/bodies.

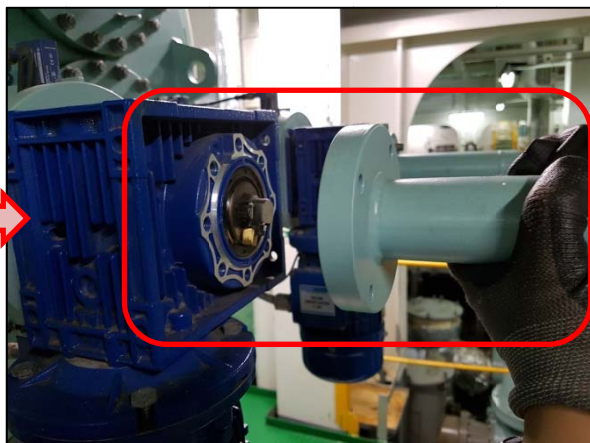

4. Remove set collar slits[by Allen wrench], if those have been installed.

5. Unscrew four(4) of nuts[by Spanner(17)] and detach reduction gear.

* Check the condition of Keys, Rev. nut, Rev. screw etc.

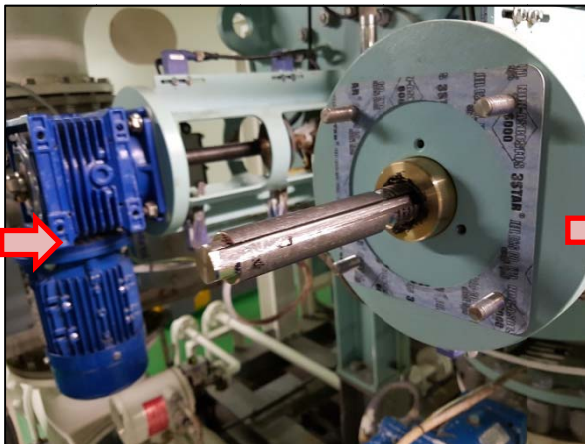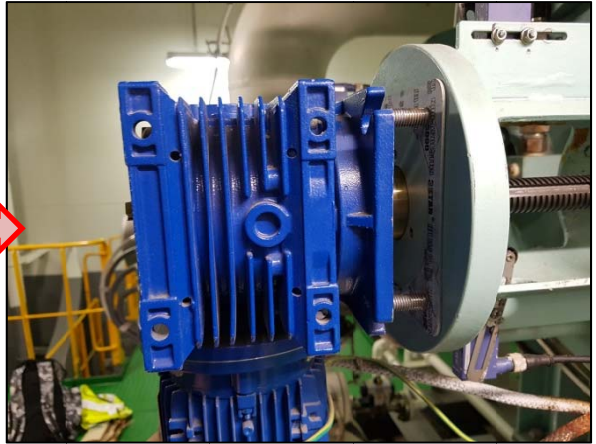

6. Replace the Keys and Assemble them(Motor, Reduction gear...) in reverse order.

